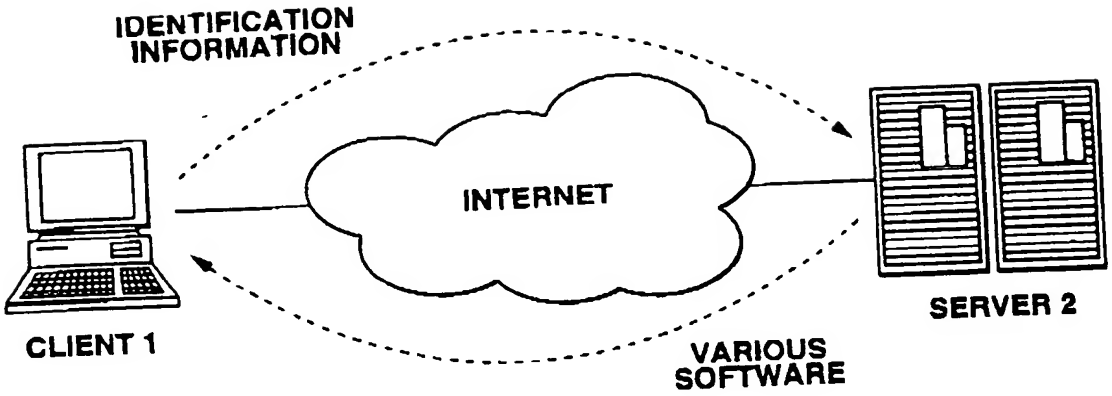
IDENTIFICATION INFORMATION
INTERNET
CLIENT 1
SERVER 2
VARIOUS SOFTWARE

FIG.1

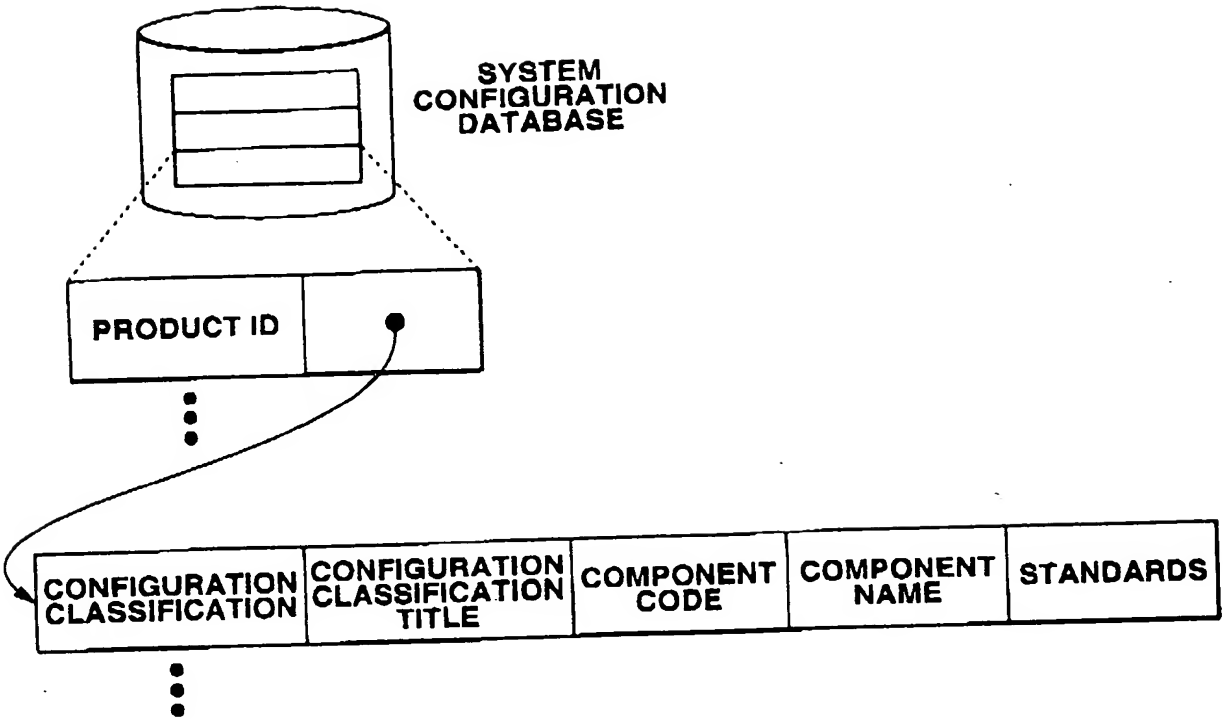
SYSTEM
CONFIGURATION
DATABASE
PRODUCT ID
CONFIGURATION CLASSIFICATION
CONFIGURATION CLASSIFICATION TITLE
COMPONENT CODE
COMPONENT NAME
STANDARDS

FIG.2

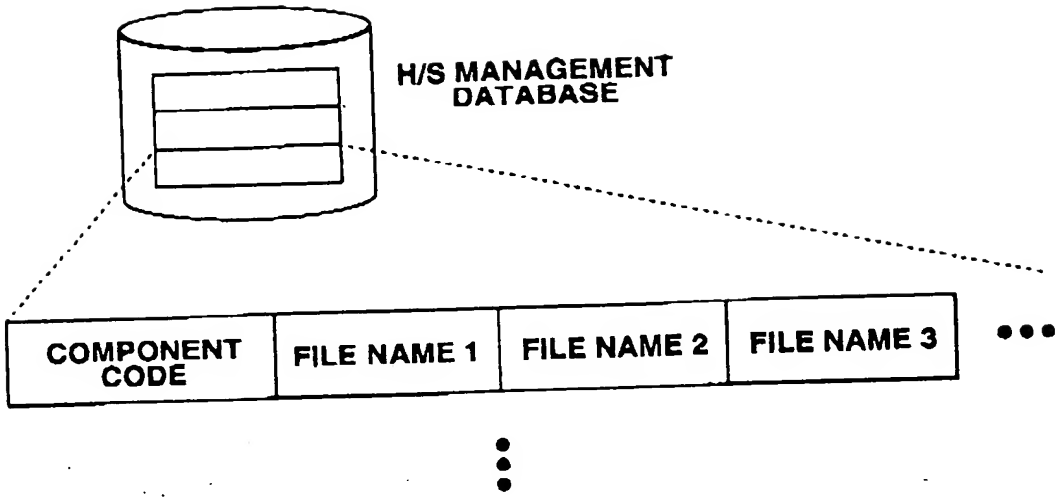
H/S MANAGEMENT DATABASE
COMPONENT CODE
FILE NAME 1
FILE NAME 2
FILE NAME 3

FIG.3

SEARCH BLOCK

SERIAL No. F77000001

SEARCH

MODEL CODE F77001A00 Pro-600L

CONFIGURATION CLASSIFICATION	CONFIGURATION CLASSIFICATION TITLE	COMPONENT CODE	COMPONENT NAME	STANDARDS
004	5.25" TYPE DRIVE	C62021001	DVD-ROM (IDE)	GD-5000 Rev. A3 F/W=0213
010	SOUND BOARD	C63011010	SOUND (SB AUDIO PC1129) PC99	CT5800 (IDENTICAL TO C63011000)
011	SPEAKER	C63016000	SPK (STEREO SPEAKER)	PA-220 (CONNECTOR:RED)
001	CPU	C65018000	H/S (SECC2/PLGA)	C72K 6200rpm
J02	ASSEMBLY	C66006100	CN (CONVERTING CONNECTOR) 3P-2P	
J02	ASSEMBLY	C66012001	CB (AC CABLE) T-MARK	YP-12/YX-12 w/VCTF 0.75x3C 6'

FIG.4

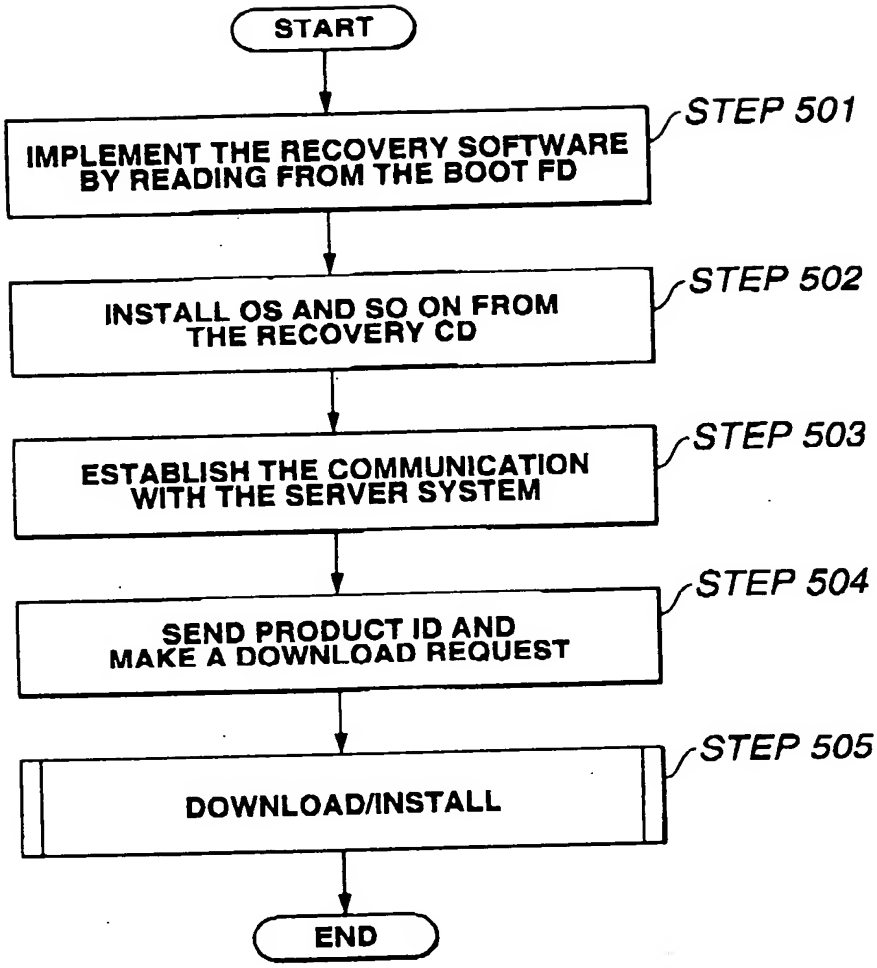
START
IMPLEMENT THE RECOVERY SOFTWARE BY READING FROM THE BOOT FD
STEP 501
INSTALL OS AND SO ON FROM THE RECOVERY CD
STEP 502
ESTABLISH THE COMMUNICATION WITH THE SERVER SYSTEM
STEP 503
SEND PRODUCT ID AND MAKE A DOWNLOAD REQUEST
STEP 504
DOWNLOAD/INSTALL
STEP 505
END

FIG.5

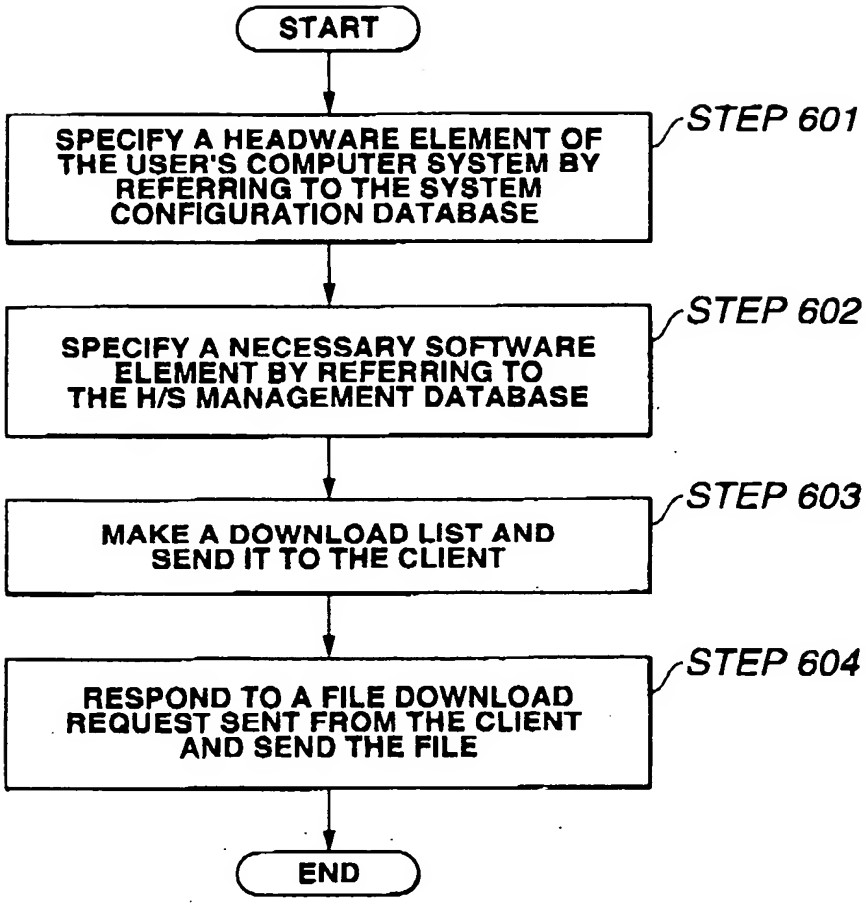
START
SPECIFY A HEADWARE ELEMENT OF THE USER'S COMPUTER SYSTEM BY REFERRING TO THE SYSTEM CONFIGURATION DATABASE
STEP 601
SPECIFY A NECESSARY SOFTWARE ELEMENT BY REFERRING TO THE H/S MANAGEMENT DATABASE
STEP 602
MAKE A DOWNLOAD LIST AND SEND IT TO THE CLIENT
STEP 603
RESPOND TO A FILE DOWNLOAD REQUEST SENT FROM THE CLIENT AND SEND THE FILE
STEP 604
END

FIG.6